



SANBlaze Software-Only Configuration and Quick Start Guide

pn400-000003 Rev 21

October 2022

The information in this User's Guide has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates.

SANBlaze Technology, Inc. reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software, if any, and documentation may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any medium or machine without prior written consent.

IN NO EVENT WILL SANBLAZE TECHNOLOGY, INC. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, THE VENDOR SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders. Copyright © 2022 by SANBlaze Technology, Inc.

All rights reserved.

Printed in the United States of America

pn400-000003 Rev 21

Contact Information:

SANBLaze Technology, Inc.
One Monarch Drive
Suite 204
Littleton, Ma (USA) 01460
1-978-679-1400

Email Support:

support@sanblaze.com

Website Support:

<http://www.sanblaze.com/support>

Contents

Table of Figures.....	4
Certified Systems SANBlaze Runs On.....	5
SANBlaze Certified Adapter Cards	5
Optional system configurations	7
Software Installation Procedure	7
Network Quick Start.....	8
To connect via Telnet:.....	8
To connect via Command Line:.....	9
To Change IP address at the command line:	9
To change the graphical mapping of ports in the GUI	9
Disable BIOS on SAS adapters	10
SANBlaze Quick Configuration Guide.....	10
Reset to Factory Configuration	10
Protocol Configuration.....	11
Configuring for NVMe-oF Operation	11
Configuring for FCoE Operation	11
Configuring for iSCSI Operation	12
Configuring for FC/SAS Operation	13
Port Mode Configuration	13
Configuring Target Ports	13
Configuring Initiator Ports	14

Table of Figures

Figure 1: Reset the VirtualLUN System	10
Figure 2: Protocol Configuration for NVMe-oF	11
Figure 3: Protocol Configuration for FCoE	12
Figure 4: Configuring Protocols for iSCSI	12
Figure 5: Configuring Protocols for FC/SAS.....	13
Figure 6: Configuring Target Ports	14
Figure 7: Configuring Initiator Ports.....	14

Certified Systems SANBlaze Runs On

The SANBlaze VirtualLUN Software product is designed to run on a variety of hardware platforms. SANBlaze recommends using a system that has been tested and certified; reference certified systems listing below.

Dell	R710 R720 R730	R805 R820 T5400	M910 M620
HP	DL360G6 DL360G8 DL370G5 DL370G6	585G6	DL380G6 DL380G7 DP380G8 DL380G9
IBM	x3650	x3650M2 x3650M4	x3650M3 x3850
Cisco	C250M	220M3 C210M2	220M4 C460M4
Intel	R2000GZ		
SuperMicro	6017R-N3RF4+ H12SSW-NT (GEN4 AMD platform with 7402p processor) is the currently supported PCIe Gen4 configuration. Other configurations may be added as additional qualification is completed.		

SANBlaze Certified Adapter Cards

The software requires Fibre Channel, Ethernet, or SAS HBAs to use for emulation. The following cards are supported and **must be used** for the various protocols.

64G Fibre Channel	Emulex	LPe36002-M64
32G Fibre Channel	Qlogic	QLE2694U QLE2742
	Emulex	LPe32000 LPe32002
16G Fibre Channel	Brocade	1860
	Emulex	LPe16000B LPe16002B
8GFibre Channel	Emulex	LPe12000 LPe12002 LPe12004
4G Fibre Channel	Emulex	LPe1100 LPe11002 LPe11004
100/50/25G iSCSI	Mellanox	ConnectX-4 family ConnectX-5 family ConnectX-6 family
	Qlogic	45000 series
40G FCoE/iSCSI	Emulex	OCe14401
40G iSCSI	Intel	XL710
10G FCoE/iSCSI	Intel	E10G42BFSR (X520) X540-T2 (RJ45 Copper)
	Brocade	1010/1020
	Emulex	OCe14102
SAS	LSI/Broadcom Broadcom 24G Broadcom 64G	LSISAS9200-8e (6 G) LSISAS92-7-8e (6 G) LSISAS9300-8e (12 G) LSISAS9400-16e (12 G)

Optional system configurations

In the event a customer would like to use a system other than those listed above, the following minimum requirements must be met to support the SANBlaze software.

Processor: x86 Intel Xeon or AMD Opteron processor. We recommend at least 2 processor cores per physical emulation port in the system. Optimal performance will be attained when all processor sockets are populated.

Memory: 2 GB minimum. At least 2GB of memory per physical emulation port are required in the system. Optimal performance will be attained when all memory slots are populated.

HDD: Single SAS/SATA HDD in the chassis. Larger sized HDD's allow for more emulation configurations to be saved. (**NOTE:** The system HDD will be overwritten during the SANBlaze software load).

CDROM: IDE/USB CDROM. The software is installed via a bootable DVD and requires an IDE or USB CDROM to boot from.

USB port: The software is licensed by USB dongle. System must have a USB port dedicated to the dongle for proper operation.

BIOS: The software needs Legacy bios mode to be installed. UEFI is NOT supported.

Software Installation Procedure

Insert USB License Dongle into USB port on target system. Software will not properly function without a valid Licensed Dongle.

Connect monitor and keyboard to target system.

Insert installation CD into target system and power on. When the CD loads a menu with the following options will be presented:

- 0) Boot from the Hard Disk (No changes to system)
- 1) Install SANBlaze Software (Destructive to all files!)

Select option '1' to install to target system. As indicated, this will destroy any data on the HDD in the target system.

Once the software is finished installing, the system will return to the # prompt. Type 'reboot -f' to reset the machine.

Eject the CD as the system is powering up. VirtualLUN software will then automatically load.

Once the system is booted, proceed to network configuration below.

Network Quick Start

Configuring the SANBlaze VirtualLUN™ can be done via a web browser or Telnet session, using the Ethernet port (10/100/1000 auto sensing) on the front panel. The software uses the 'eth0' interface provided under Linux. Please connect to the 'eth0' interface of your target machine.

To connect via a Web Browser:

IP Address: **192.168.1.222**

Default Gateway: **192.168.1.1**

Requires Java version 6u26 or newer running on the client web browser.

User Name: **system**

Password: **SANBlaze** (case sensitive)

Changing the IP address

Once the VirtualLUN system has been accessed, the IP address, system name, and gateway can be changed, using the main web page.

To connect via Telnet:

Telnet 192.168.1.222

Note: If your host is not in the VLUN's */etc/hosts* file, the system will take a few seconds to reply.

User Name: **vlun**

Password: **SANBlaze** (case sensitive)

Upon successful log-in, issue the **su** command to get superuser access.

su

Password: **SANBlaze**

To connect via Command Line:

In addition to the Ethernet based connectivity methods, the VirtualLUN can be accessed via the command line if desired. Connecting a monitor and keyboard to the product will allow direct access to the command line.

Once booted, the system will prompt for user name/password:

User Name: **vlun**
Password: **SANBlaze** (case sensitive)

Upon successful log-in, issue the **su** command to get superuser access.

#su

Password: **SANBlaze**

To Change IP address at the command line:

Run the network config script:

/virtualun/scripts/config_network.sh

The script will then prompt you for all the necessary network settings.

To change the graphical mapping of ports in the GUI

This will allow you to map the physical ports in your system to reflect properly within the GUI. The GUI can then be setup to show ports in the same order as they are physically laid out. Instructions for mapping out the physical layout of VLUN system ports:

You will need:

- 1) Physical access to the VLUN system.
- 2) A switch or loop back connector that can bring a port online.
- 3) Console or ssh access to the VLUN system.

Steps:

- 1) Open an ssh session or login from the console to the VLUN.
- 2) At the command prompt, type **[root@virtualun ~]# config_portmap**
- 3) Follow the instructions, enter Slot orientation, number of slots and number of ports in each slot.
- 4) Then use a connection to a switch or loopback connector to bring each port online, one by one.
- 5) When the command finishes, you will have mapped out the ports. You can then go back to the GUI and the port order and graphics should reflect the physical map of the chassis.

Disable BIOS on SAS adapters

If using SAS adapters, the card BIOS needs to be disabled for proper operation. A script is provided on the system to do this. First make sure all cables are disconnected from the cards you wish to use. Then ssh into the system or login via the console and execute the following command and follow the instructions:

```
[root@virtualun ~]# lsi_sas_disable_bios.sh
```

SANBlaze Quick Configuration Guide

This document describes how to quickly configure the VirtualLUN product to enable specific protocols. Complete the three sections to configure the system:

1. Reset to Factory Configuration
2. Protocol Configuration
3. Port Mode Configuration

Reset to Factory Configuration

If the state of the current system is unknown, it is best to reset back to factory defaults. This can be done via the 'Poweroff/Reset' link the left-hand menu. Once that is clicked you will be presented with a 'Reboot with Factory Defaults' button. Clicking that will clear the configuration and reboot the system. Once it has rebooted, you can continue on with your configuration.

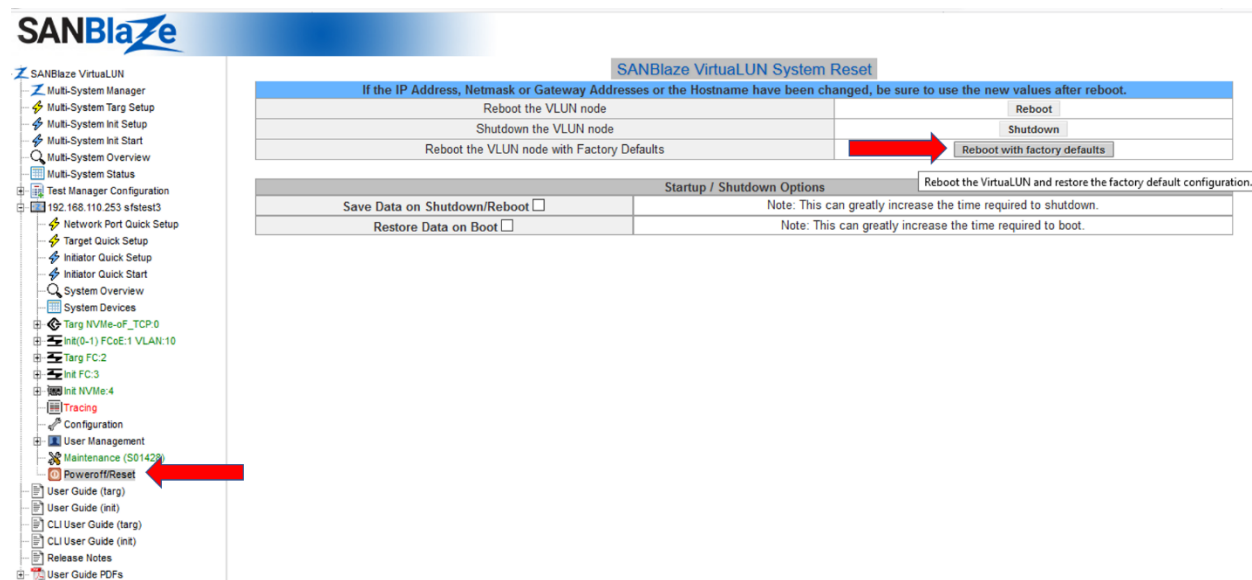


Figure 1: Reset the VirtualLUN System

Protocol Configuration

Configuring for NVMe-oF Operation

Select the Port you want to configure, and then select the NVMe-oF protocol as shown below.

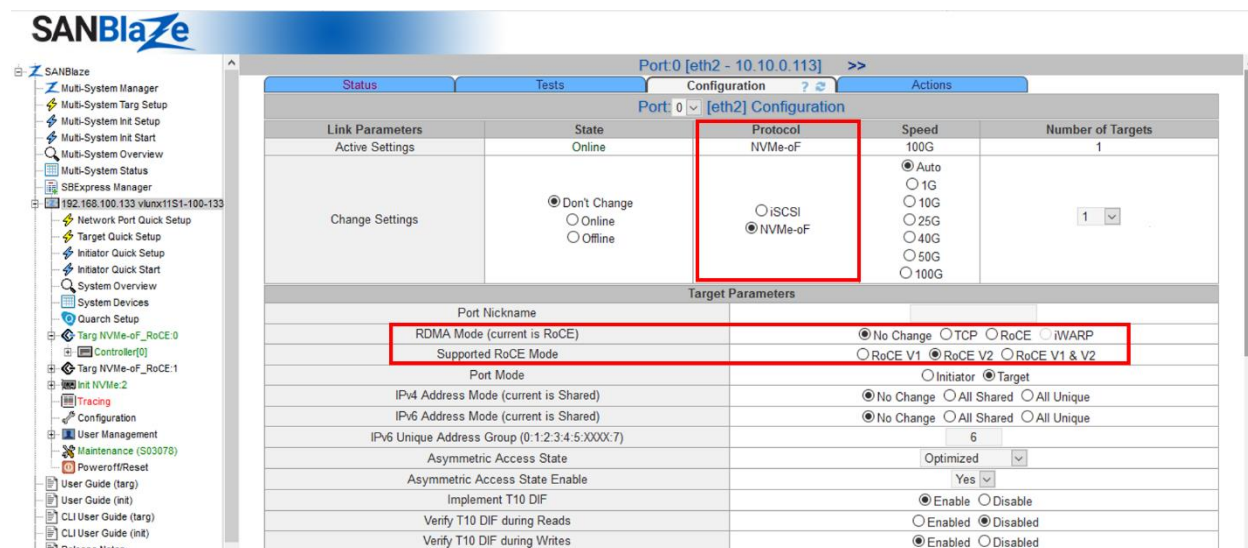


Figure 2: Protocol Configuration for NVMe-oF

Next, select the RDMA Mode. It displays the current selection, so you can select “No Change” or TCP, RoCE or iWARP. In the Supported RoCE Mode field chose RoCE v1, RoCE v2 or both RoCE v1 & v2.

Configuring for FCoE Operation

Click the 'Network Port Quick Setup' link in the left hand menu of the GUI. On the right hand side select the ports you want to change to FCoE mode, set the protocol to Fcoe and then select the desired mode (initiator or target). Then hit 'Apply'.

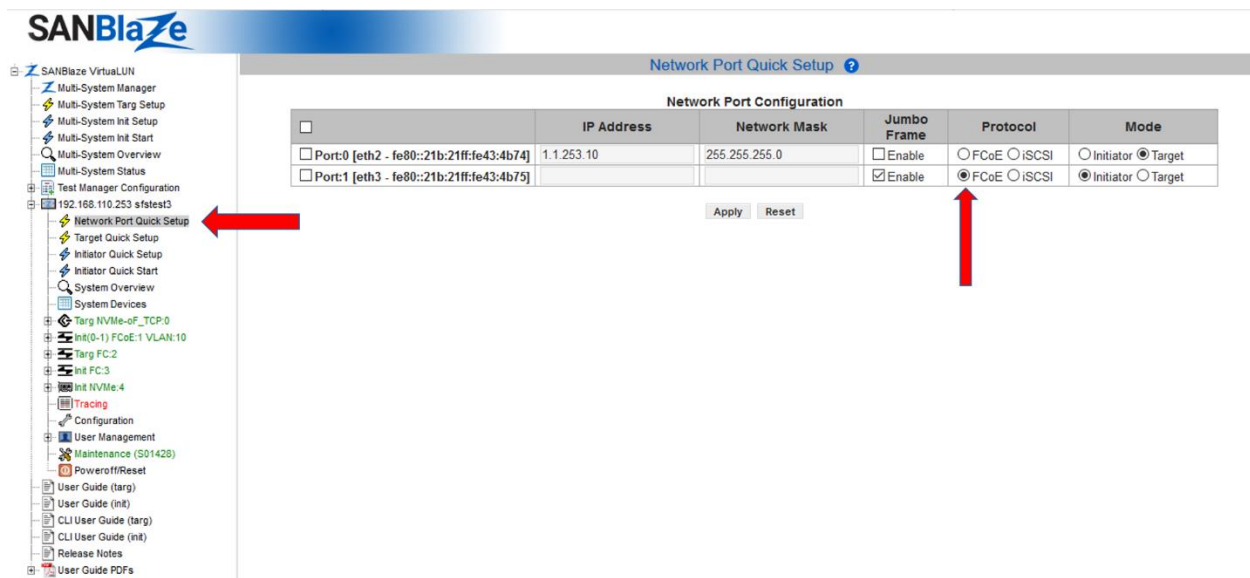


Figure 3: Protocol Configuration for FCoE

Configuring for iSCSI Operation

Click the 'Network Port Quick Setup' link in the left hand menu of the GUI. On the right hand side select the ports you want to change to iSCSI mode, set the protocol to iSCSI, set IP addresses if needed and select the desired mode (initiator or target). Then hit 'Apply'.

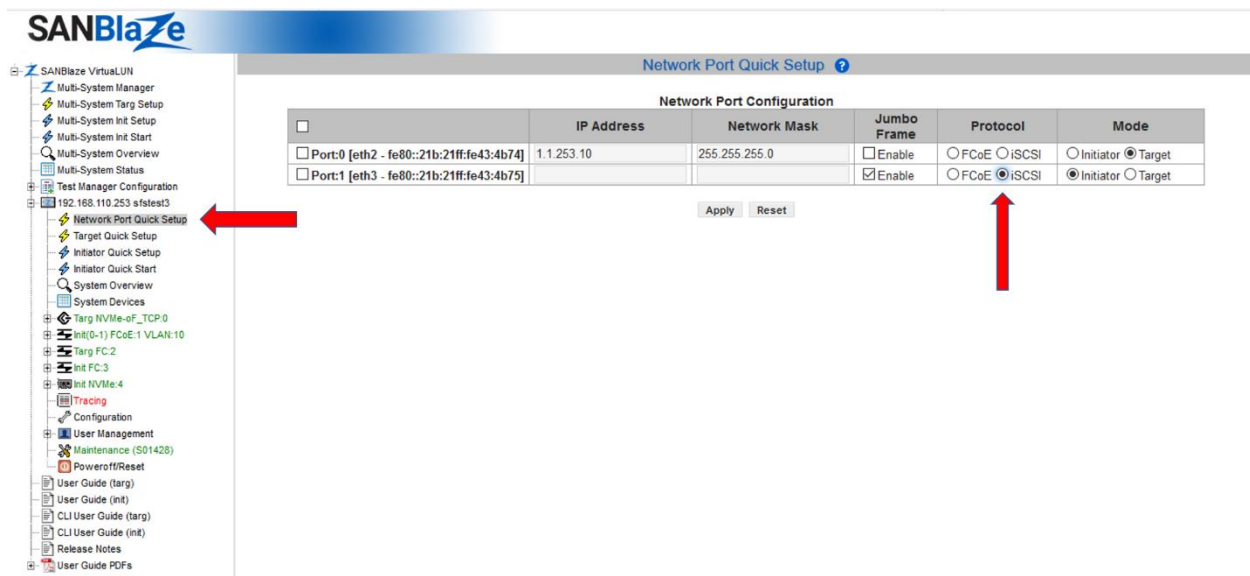


Figure 4: Configuring Protocols for iSCSI

Configuring for FC/SAS Operation

There is no protocol to set for FC/SAS ports but you can quickly change the port mode (initiator or target) via the 'Multi-System Manager' page. Select the option you want and click **Apply**.

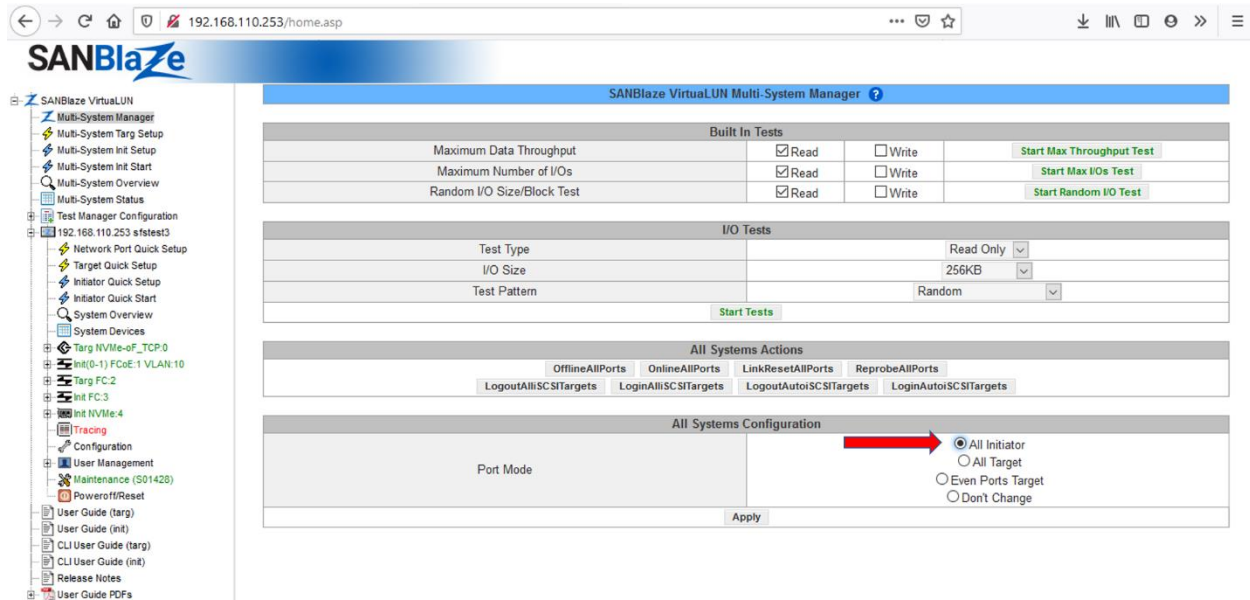


Figure 5: Configuring Protocols for FC/SAS

Port Mode Configuration

Configuring Target Ports

Once a port is in target mode you can quickly configure the number of targets and LUNs on each port via the 'Target Quick Setup' page from the left-hand menu. Select how many targets and LUNs you want on each port and click **Apply**.

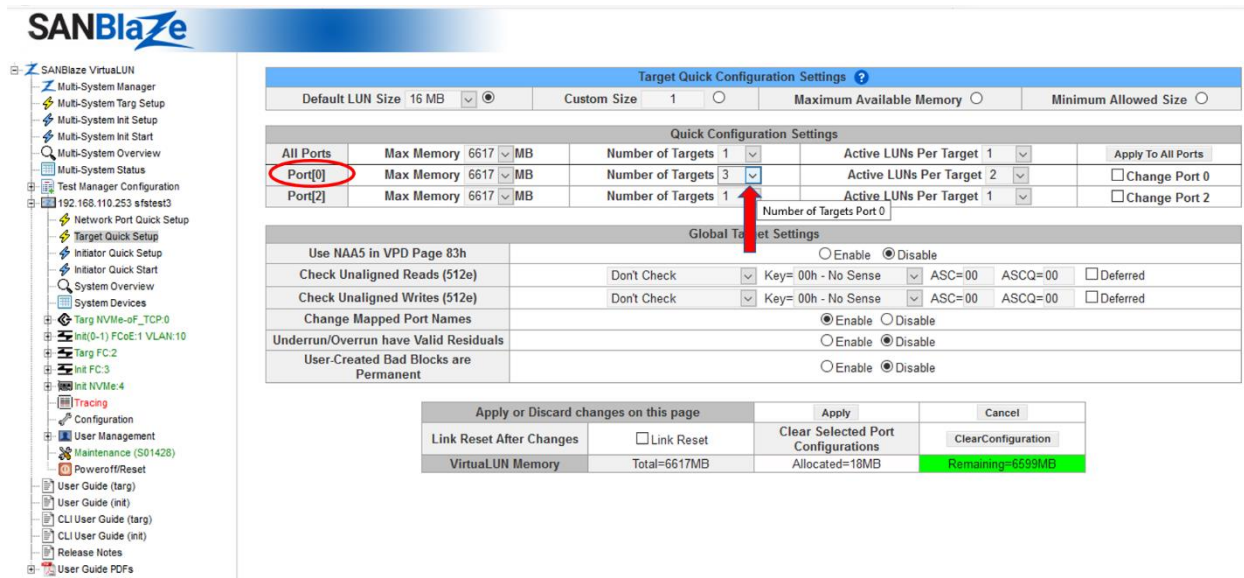


Figure 6: Configuring Target Ports

Configuring Initiator Ports

Once a port is in initiator mode you can quickly configure the number of initiators on each port via the 'Initiator Quick Setup' page from the left-hand menu. Select how many initiators you want on each port and click **Apply**.

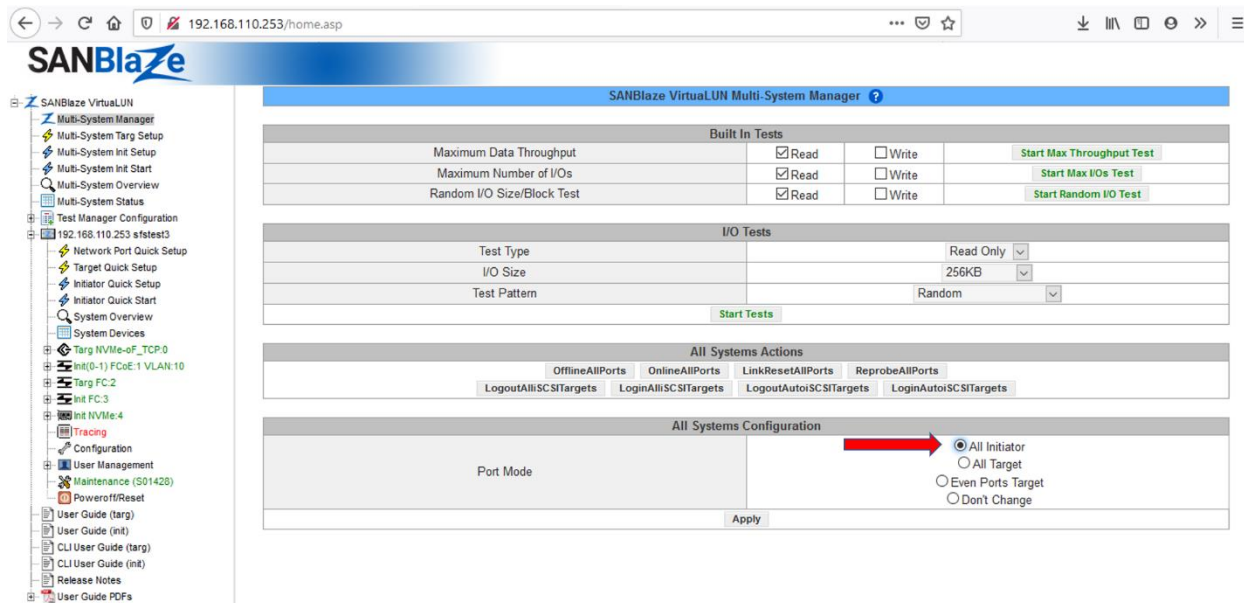


Figure 7: Configuring Initiator Ports

This concludes the set-up of SANBlaze's software only solution. For more information or if you have any questions, please contact SANBlaze support (details below).

Contact Support

STORAGE TESTING SUPPORT

If you need technical support, please click on the SANBlaze Help Center or email us by clicking Email Support below.

[SANBlaze Help Center](#) | [Email Support](#)

For additional information on SANBlaze Storage Emulation Testing solutions, please access the areas listed below. If you need additional information that you cannot find here, please [contact us](#) via phone @ (978) 679-1400.

Additional information on storage testing products:

[Data Sheets](#) – A list of all of the data sheets available for SANBlaze products.

[Video Training Library](#) – The videos provide training on a number of tasks associated with the setup and deployment of SANBlaze storage emulation systems and software.

[White Papers](#) – A list of all white papers available for SANBlaze products.